

DD installation manual

For Simatic PDM



Table of contents

1	Ge	eneral	3
1	1.1	System requirements	t.
2	Si	matic PDM V8.2 integration	4
- 2	2.1	Simatic configuration files	4
2	2.2	Integrate the DD file	4



1 General

This document describes how to integrate Val Controls DD files into Simatic PDM



2 Simatic PDM V8.2 integration

The following steps must be completed to integrate a Val Control HART DD file into Simatic PDM V8.2.

2.1 Simatic configuration files

Edit the following file:

 $\label{eq:catalog} C:\ProgramData\Siemens\Automation\SIMATIC_PDM\EDD_WorkingDir\edd_catalog\catalog\data\manufacturer.csv$

Add the following line to the end of the file:

Val Controls A/S;;;;; Val_Controls_AS;0x602E;

Edit the following file:

 $\label{eq:c:ProgramDataSiemensAutomationSIMATIC_PDMEDD_WorkingDiredd_catalogDEVICESIIDEV01.cfg$

Add the following lines to the end of the file:

MANUFACTURER 0x602E = Val_Controls_AS DEVICE_TYPE 0xE1F0 = _IVC24

2.2 Integrate the DD file

Open the Device integration Manager.

In the menu select "File" \rightarrow "Read device description from compressed source...". Select the DD zip file.

Set a checkmark at Devices \rightarrow HART-Controller \rightarrow VAL_CONTROLS_AS \rightarrow IVC24

In the menu select "Catalog" \rightarrow "Integration"

The DD file is now integrated and can be assigned to devices in Simatic PDM